





- 4. Pull out the platform and unfold.
- 5. Open the valve to lower the platform to the ground. Close the valve again.

## Up and stow

- 6. Work the pump to raise the platform until the arms align with the cassette. Perform step 4, 3 and 2 in reverse order to stow the lift back into the cassette.
- 7. If not working, open the valve and work the pump to remove air from the system.
  - Close the valve and try step 6 again.
- 427389-3 2024/10